

## Programming the Dialer on Dial 9 first

- 1.) Lift the handset and listen for dial tone. (Ignore any messages you may hear during programming).
- 2.) Press: # 0 \* (hear 1 beep)
- 3.) Press: 0 1 9 # 2 1 877 255 4665 # # (2 beeps)
- 4.) Press: 0 5 1 (2 beeps)
- 5.) Press: 0 6 9 (2 beeps)
- 6.) Press: 0 3 1 (2 beeps)
- 7.) Hang-up the handset for a couple of seconds, then pick-up and listen for our Fax24 voice prompts.